
Assembly Instructions for Servo-Driven Gear Rack Kit (Dual Gear Rack)


SKU: 3207-0003-0002

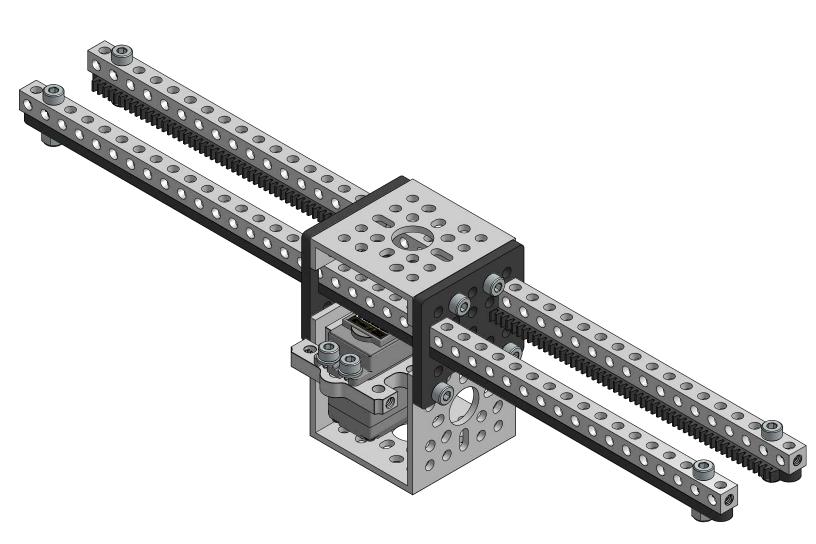

TOOLS REQUIRED


- 2.5mm Hex Key (L-Key or T-Handle)
- 3mm Hex Key (L-Key or T-Handle)
- 7mm Nut Driver

Kit Contents:

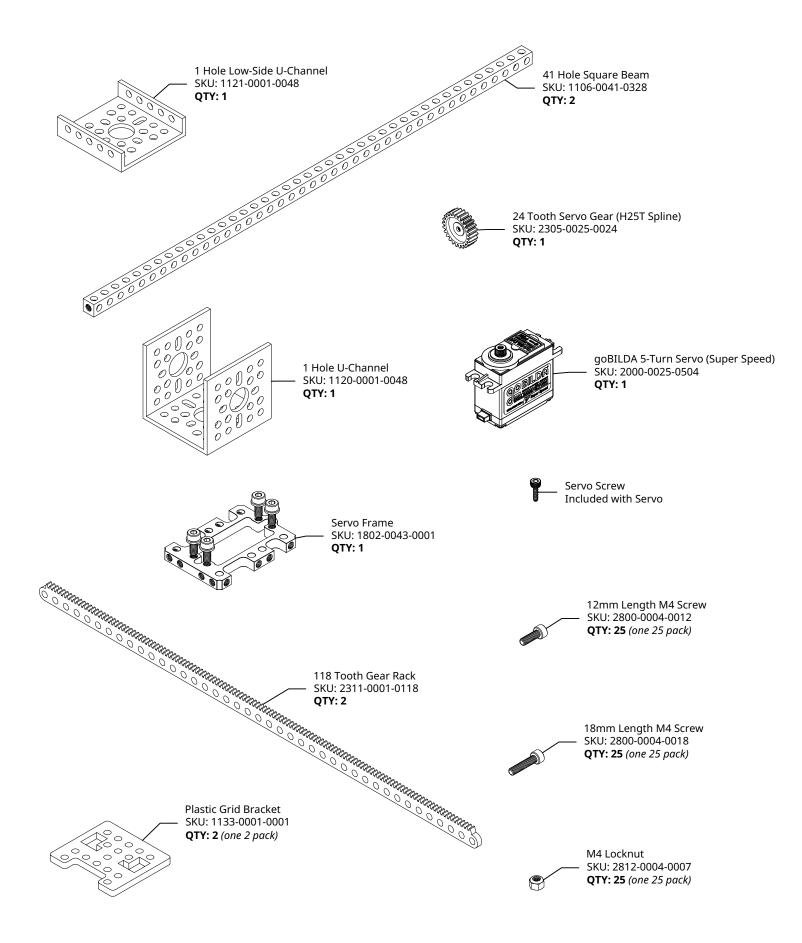


Step 1

 Attach the servo frame to the servo using the four screws and washers included with the servo frame. Then attach the servo gear to the servo spline using the servo screw.



Step 2

Using four 12mm length screws and four locknuts, attach the plastic brackets to the 1-Hole Low-Side U-Channel.

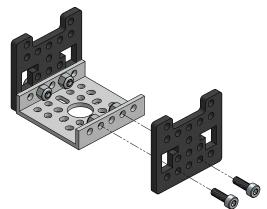

Step 3

Use one 18mm length screw and one locknut per gear rack to attach the gear racks to the beams.

Step 4

Slide the gear rack assembles through the passageways of the plastic brackets. Insert another 18mm length screw and nut on the other side of each.

